

ドライバー用電源

 
 
For DC Screwdrivers Power Supply

T-45BL / T-70BL

取扱説明書

Operation Manual

EN

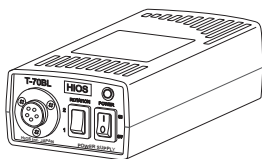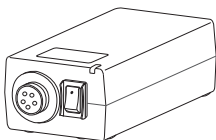

Important Safety Instructions

Before using this machine, read this section and follow the instructions to properly use this machine.

Installation

- The unit should be used in a temperature and humidity-controlled room.
Keep the unit away from a place with poor ventilation, in dust or metal pieces.
- Do not place any objects on the unit.
- The place to install the unit should be vibration-free and the unit should be securely fixed. If the unit is installed on the wall or on a high place, make sure to use the attached Mounting Bracket to fix it securely.
- Do not install the unit close to high voltage equipments.

Handling

- Install a leakage breaker and safety breaker on the input power source and connect the ground to use the unit.
- Connect to a power source of the specified voltage.
- Do not use with other drivers or devices except the models listed in this operation manual.
- If the protection circuit works due to overheat, stop operation immediately, pull the power plug from the outlet and send it back to your HIOS distributor for repair.
- The unit may automatically stop in use when the protection circuit works due to overcurrent, etc.
Turn off the power switch once and turn it on in 5 seconds for restart.
If the unit stops while in screw fastening, make sure to check the torque of the fastened screw.
- Do not disassemble or modify the unit.
- Do not drop the power Supply or subject it to violent impact.
- Do not drag the unit by its driver cord or AC cord. Keep the cords away from foreign objects, oil or something sharp.
- Make sure to grasp the plug section to disconnect the AC cord from the outlet.
- Turn the unit off and disconnect the AC cord from the outlet when the unit is not in use.
- IMPORTANT SAFETY INSTRUCTIONS-SAVE THESE INSTRUCTIONS.
- DANGER-TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK. CAREFULLY FOLLOW THESE INSTRUCTIONS.

Selection of Power Supply Cord:

Use in U.S.A. - Use UL Listed detachable power supply cord, No.18AWG,3 conductors, flexible cord, rated 10A, VW-1, 80°C, minimum 1.8 m, maximum 3 m long. Provided with a molded-on, non-polarized attachment plug with a 15A, 125V (NEMA5-15P) or 15A, 250 V (NEMA 6-15P) configuration and a molded-on connector which mates with the Power Inlet.

The following flexible cord type may be used: S, SE, SO, SP-3, SPT-3, ST,STO, SJ, SJE, SJO, SJT, SJTO, SP-2, SPE-2, SPT-2, SV, SVE, SVT.

Use in countries other than U.S.A. - Use IEC60227 certified PVC flexible power supply cord, marked H03VVF or H05VVF, 3C x 0.75 mm², rated min. 10A, 250V

Accessories



	Mounting Bracket	Screw
T-45BL	1pc	1pc
T-70BL	2pcs	4pcs

 
AC Cord (1.8m)

Parts and Their Functions

EN


T-45BL

T-70BL

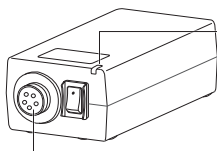


1

 2

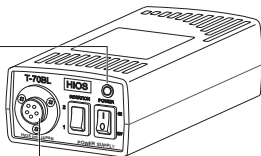


Front Side

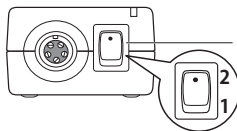 


3

2

 1




Back Side

 

4

 5



1 Power Indicator: Lights up when the power switch is turned ON.

2 Connector for the Screwdriver: Connect the screwdriver cord.

3 DC Output Switch: 2 (HI: DC30V) / 1 (LOW: DC20V)

4 Power Switch: Turns the power ON or OFF.

5 Connector for AC Cord: Connect the power cord.

Compatible Screwdrivers (Including OPC/SS Type)

T-45BL

Series	Model
BLG-BC2	BLG-4000BC2/BLG-4000BC2-LT/BLG-5000BC2/BLG-5000BC2-15*/ BLG-5000BC2-HT*
BLG-BC1	BLG-4000BC1/BLG-5000BC1/BLG-5000BC1-15*/BLG-5000BC1-HT*
BLG-ZERO1	BLG-4000ZERO1/BLG-5000ZERO1/BLG-5000ZERO1-15*/ BLG-5000ZERO1-HT*
BLG	BLG-4000/BLG-5000/BLG-5000-15*/BLG-5000-HT*
BL	BL-2000/BL-3000/BL-5000/BL-5000-15*/BL-5020*

EN

T-70BL


Series	Model
BLG-BC2	BLG-4000BC2/BLG-4000BC2-LT/BLG-5000BC2/BLG-5000BC2-15*/ BLG-5000BC2-18*/BLG-5000BC2-HT*/BLG-7000BC2*
BLG-BC1	BLG-4000BC1/BLG-5000BC1/BLG-5000BC1-15*/BLG-5000BC1-18*/ BLG-5000BC1-HT*
BLG-ZERO1	BLG-4000ZERO1/BLG-5000ZERO1/BLG-5000ZERO1-15*/ BLG-5000ZERO1-18*/BLG-5000ZERO1-HT*
BLG	BLG-4000/BLG-5000/BLG-5000-15*/BLG-5000-18*/BLG-5000-HT*
BL	BL-2000/BL-3000/BL-5000/BL-5000-15*/BL-5020*/BL-7000/BL-7000HT

* Use only 2(HI) power outlet with the *models. These models may not perform properly on 1(LOW) power outlet.


Attach the Mounting Bracket

Make sure to use the attached Mounting Bracket and the screw to fix the unit securely if you install it on the work table, the wall, etc.

 T-45BL


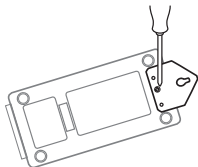


T-70BL


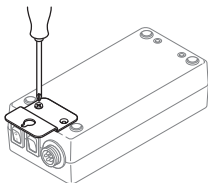 


EN

  Example

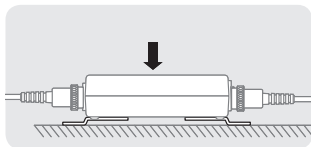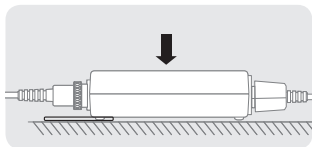

Specifications

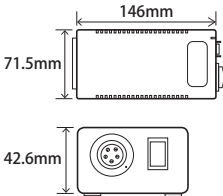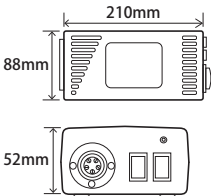  Model Name		T-45BL	T-70BL
Primary Side	Input Voltage	AC100-240V (47-63Hz)	
	Power Consumption	45-78VA Fuse capacity: 3.15A/250V (Built-in)	40-65VA Fuse capacity: 5A/250V (Built-in)
Secondary Output Voltage		HI(2): DC30V / LOW(1): DC20V (2-step switchable)	
External Dimensions			
Weight		320g	685g
Number of Connectable Screwdrivers		1 unit	

EN

DISA Elektro AG

Kägiswilerstrasse 33, CH-6060 Sarnen, Tel. +41 41 666 70 50, Fax +41 41 666 70 49
 E-Mail: info@disa.ch www.disa.ch Ein Unternehmen der ELBET Holding AG